

Hochlast-Zeitfenster gemäß Leitfaden BNetzA für 2012

Entnahme	Frühling Mrz - Mai	Sommer Jun - Aug	Herbst Sep - Nov	Winter Dez - Feb
Mittelspannung			17:30 – 18:15	8:30 – 8:45 10:30 – 12:00 17:00 – 19:00
Umspannung			17:30 – 18:00	17:00 – 19:00
Niederspannung			17:30 – 18:00	17:00 – 19:00

