

## Hochlast-Zeitfenster gemäß Leitfaden BNetzA für 2018

Entnahme	Frühling Mrz - Mai	Sommer Jun - Aug	Herbst Sep - Nov	Winter Dez - Feb
Mittelspannung			9:00 – 9:15 9:45 – 10:30 11:15 – 12:00	8:00 – 12:15 17:00 – 19:00
Umspannung			11:45 – 12:00	8:15 – 9:45 11:15 – 12:00 17:30 – 19:00
Niederspannung			11:45 – 12:00	8:15 – 9:45 11:15 – 12:00 17:30 – 19:00

